

## INDEX

### ACCESSORY EQUIPMENT

	Para.
Boards, extender	
Catalog Nos.	1.6.6
Description of	1.6.6
Use of	4F.2
Covers, rear, console	
Catalog Nos.	1.6.4
Description of	1.6.4
Installation of	2.7.4
Equalizer, record, CCIR	
Catalog No.	1.6.7
Preamplifier, Microphone (6-31)	
Catalog No.	1.6.1
Description of	1.6.1
Installation of	2.7.1
Remote Control Unit (6-30)	
Catalog No.	1.6.2
Description of	1.6.2
Installation of	2.7.2
Scrape Flutter Idler (6-7)	
Catalog No.	1.6.5
Installation of (4A-3, 4)	4A.3
Lubrication of	4B.3.4

	Para.
Transformers, input	
Catalog Nos.	1.6.1
Description of	1.6.1
Installation of	2.7.1

### ADJUSTMENTS AND ALIGNMENT

Electronic	
Azimuth, record head (4C-6)	4C.3.8
Azimuth, reproduce head (4C-6)	4C.3.6
Equalization, Record	4C.3.10
Equalization, Low Freq., Repro.	4C.3.9
Power Supply (4C-5)	4C.3.5
Reproduce/Record Alignment	4C.3.7
Test Tapes	4C.3.1
Sel-Sync (6-24)	
Bias Trap	4C.4.4
Level	4C.4.3
Tape Transport	
Brakes (4C-2)	4C.2.4
Capstan Idler (4C-3, 4)	4C.2.5
Tape Tension (4C-1)	4C.2.3
ARM, REEL IDLER (6-15)	
Adjusting, tension	4E.6.3
Removal of	4E.6.4

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS

ARM, TAKEUP TENSION	Para.	BRAKES, TAPE TRANSPORT (Cont.)	Para.
Adjusting, force	4E.7.1	Replacing brake bands	4E.4.6
Adjusting, safety switch	4E.7.2	Servicing hints	4E.2.1
Principles of Operation	5.1.5	CAPACITOR, DRIVE MOTOR	
Removing Tape Guide and Hook	4E.7.3	Replacement of	4E.5.4
Replacing Tension Spring	4E.7.4	CAPACITOR, REWIND MOTOR	
Replacing Complete Assembly	4E.7.5	Replacement of	4E.4.9
AZIMUTH, HEADS		CAPACITOR, TAKEUP MOTOR	
Adjustment of (4C-6)		Replacement of	4E.4.9
Record	4C.3.8	CAPSTAN IDLER	
Reproduce	4C.3.6	Adjusting, force (4C-3, 4)	4C.2.5
BALL BEARING, REEL IDLER (6-15)		Adjusting, position	4E.8.3
Replacement of	4E.6.6	Lubrication of	4B.3.3
BIAS		Removal of solenoid	4E.8.5
Adjustment of	4C.3.7	Removal of idler	4E.8.4
Checkout of	4F.6	Servicing hints	4E.2.4
BIAS AMPLIFIER (6-24)		CHANNELS, ADDITION OF (4A-5)	4A.4
Checkout of	4F.6	CLEANING, TRANSPORT	4B.1
Principles of Operation	5.2.2	CONNECTOR, HEAD (4A-1, 6-5)	4A.2.3
BIAS OSCILLATOR (6-22)		CONNECTING SIGNAL	
Checkout of	4F.6	Input	2.5.2
Principles of Operation	5.2.2	Output	2.5.3
BOARDS, EXTENDER (Optional Access)		CONNECTING POWER	2.6
Catalog Nos.	1.6.6	CONTROLS, INDICATORS (3-1, 2)	3.1
Description of	1.6.6	CONTROL BOX, TRANSPORT (6-17, 18)	
Use of	4F.2	Removal of (6-8)	4E.11.3
BCARDS, PRINTED CIRCUIT (1-4)		CONTROL CIRCUIT, TRANSPORT (6-20, 21)	
Bias Amplifier	1.3	Principles of Operation	
Power Supply	1.2	Edit Mode	5.1.7.4
Record	1.3	Fast Forward Mode	5.1.7.2
Reproduce	1.3	Play Mode	5.1.7.1
Replacement of Parts	4F.9.2	Record Mode	5.1.7.5
BOX, CONTROL		Rewind Mode	5.1.7.3
Removal of	4E.11.3	CONVERSION AND EXPANSION	
BOX, HEAD CABLE		Channels, addition of (4A-5)	4A.4
Removal of (4A-2)	4A.2.4	Conversion, record and reproduce	4A.6
BOX, POWER SUPPLY		Conversion, tape width	4A.2
Removal of	4E.3	Covers, rear, console	4A.5
BRAKES, TAPE TRANSPORT (6-14)		Idler, scrape flutter	4A.3
Adjusting force (4C-2)	4C.2.4	Turntables, repositioning of	4A.1
Removal of assembly	4E.4.5		
Remounting and adjusting assembly	4E.4.8		

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS

CORRECTIVE MAINTENANCE	Para.	ELECTRONICS, ASSEMBLIES (Cont.)	Para.
Heads	4D	Input Power and Indicators	4F.3
Transport	4E	Power Supply	4F.5
Electronics	4F	Record/Reproduce circuits	4F.7
COVERS, REAR, CONSOLE (Optional)		Record Relay	4F.4
Catalog Nos.	1.6.4	Replacement of Parts	4F.9
Installation of	2.7.4	Description, General (1-3)	1.3
CURVES, RESPONSE (6-32,33)		Principles of Operation (5-3)	5.2
Achieving (4F-1,2)	4F.10	ELECTRONICS, REPRODUCE-ONLY (6-25)	
DEMAGNETIZING	4B.2	Controls and Indicators	3.1.3
DESCRIPTION, GENERAL		Description of (1-5)	1.4
Accessories	1.6	EQUALIZER, RECORD, CCIR (optional)	1.6.7
Electronics, record/reproduce (1-3)	1.3	EQUALIZERS	
Electronics, reproduce-only (1-5)	1.4	Mounting (2-6)	2.8(f)
Head, assembly	1.5	EQUALIZATION, RECORD	
System (1-1)	1.1	Adjustment of	4C.3.10
Tape Transport (1-2)	1.2	Switching of	5.2.3
DISTORTION, OVERALL		EQUALIZATION, REPRODUCE	
Checking	4B.4.6	Adjustment, high frequency	4C.3.7
Specifications for	1.7	Adjustment, low frequency	4C.3.9
DRIVE MOTOR, ASSEMBLY (6-16)		Switching of	5.2.4
Checking	4E.11.7	ERASE	
Lubrication, initial	4B.3.2	Adjustment of	4C.3.7
Lubrication, scheduled	4B.3.3	FAN, DRIVE MOTOR	
Removal of	4E.5.3	Replacement of	4E.5.2
DRIVE SYSTEM		FAST-WINDING MODES	
Principles of Operation	5.1.3	Operation of	3.5
DRIVE PLATE, REEL		Time Specification	1.7
Replacement of	4E.4.3	FLUTTER	
EDIT MODES		Checking	4B.4.7
Description and Operation	3.6	Description, tape scrape flutter	5.1.8
ELECTRONICS, ASSEMBLIES (6-24)		Specification for	1.7
Alignment of		FLYWHEEL, DRIVE MOTOR	
Azimuth, record head (4C-6)	4C.3.8	Removal of	4E.5.2
Azimuth, reproduce head (4C-6)	4C.3.6	FREQUENCY RESPONSE, OVERALL	
Equalization, Low Freq., repro	4C.3.9	Checking	4B.4.4
Equalization, record	4C.3.10	Specification for	1.7
Power Supply (4C-5)	4C.3.5	FRONT PANEL CONSOLE	
Reproduce/Record function	4C.3.7	Removal of (2-2)	2.3
Controls and Indicators (3-2)	3.1.2		
Corrective Maintenance			
Bias	4F.6		

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS

GUIDE, TAPE, REEL IDLER	Para.	HUB SIZE, REEL	Para.
Removal of	4E. 6. 1	Selection of (operation)	3. 2. 2
Rotation of	4A. 2. 2	Tension control (reel switch)	3. 1. 1
GUIDE, TAPE, TAKEUP TENSION ARM		HOOK, TAPE TAKEUP TENSION ARM	
Removal of	4E. 7. 3	Removal of	4E. 7. 3
Rotation of	4A. 2. 2		
HEAD, ASSEMBLY		IDLER, REEL (6-15)	
Azimuth, alignment		Corrective Maintenance	4E. 6
Record (4C-6)	4C. 3. 8	Principle of Operation	5. 1. 4
Reproduce (4C-6)	4C. 3. 6	IDLER, SCRAPE FLUTTER	
Changing of (4A-1)	4A. 2. 3	Catalog No. (optional)	1. 6. 5
Cleaning of	4B. 1	Installation of (4A-3, 4)	4A. 3
Corrective Maintenance		Lubrication of (6-7)	4B. 3. 4
Height Adjustment (4D-1)	4D. 2	INDICATOR LAMPS	
Replacing Head Stacks	4D. 4	Power, replacement of	4E. 11. 10
Tape Wrap Adjustment	4D. 3	Record and Ready	
Zenith Adjustment (4D-1)	4D. 3	Check of	4F. 3
HEAD, ERASE		Replacement of	4F. 9. 1. 1
Height Adjustment	4D. 2. 3	VU Meter	
Replacement of	4D. 4. 2	Replacement of	4F. 9. 1. 2
HEAD, RECORD		INSTALLATION	
Azimuth, alignment (4C-6)	4C. 3. 8	Connecting, assemblies (2-3, 4, 6-34)	2. 4
Height Adjustment (4D-1)	4D. 2	Connecting, power (2-3, 6-35)	2. 6
Replacement of	4D. 4. 1	Connecting, signal lines	2. 5
Tape Wrap, Adjustment	4D. 3	Installing Accessories or plugs	2. 7
Zenith Adjustment (4D-1)	4D. 3	Mounting (2-1)	2. 2
HEAD, REPRODUCE		Removing Panel, Console (2-2)	2. 3
Azimuth Alignment (4C-6)	4C. 3. 6	Unpacking	2. 1
Height Adjustment (4D-1)	4D. 2	LEVEL, RECORD	
Replacement of	4D. 4. 1	Calibration of	4C. 3. 7
Tape Wrap Adjustment	4D. 3	LEVEL, REPRODUCE	
Zenith Adjustment (4D-1)	4D. 3	Calibration of	4C. 3. 7
HEAD, QUARTER TRACK		LEVEL, SEL-SYNC	
Height Adjustment (4D-1)	4D. 2. 2	Adjustment of	4C. 4. 3
Replacement of	4D. 4. 1	LIFTER, TAPE (6-11)	
Selection of (Operation)	3. 4(2)	Adjustment of	4E. 9. 1
Tape Wrap Adjustment	4D. 3	Removal of	4E. 9. 2
Zenith Adjustment (4D-1)	4D. 3	Principles of Operation	5. 1. 6
HINTS, SERVICING		LUBRICATION	
Brake Bands	4E. 2. 1	Capstan Idler	4B. 3. 3
Relays	4E. 2. 2	Drive Motor, initial	4B. 3. 2
Solenoids	4E. 2. 3	Drive Motor, scheduled	4B. 3. 3
HEAD CABLE BOX (6-6)		Scrape Flutter Idler	4B. 3. 4
Removal of (4A-2)	4A. 2. 4		

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS

MAINTENANCE, ROUTINE	Para.	POWER SUPPLY, ELECTRONICS (6-22, 23)	Para.
Checks, overall performance	4B.4	Adjustment of (4C-5)	4C.3.5
Cleaning	4B.1	Checking (6-19)	4F.5
Demagnetizing	4B.2	Principles of Operation	5.2.1
Lubricating	4B.3	Removing Box	4E.3
MONITORING		PREAMPLIFIER, MICROPHONE (Optional)	
MOTOR, DRIVE, assembly(6-16)		Catalog No.	1.6.1
Checking	4E.11.7	Installation of	2.7.1
Lubrication, initial	4B.3.2	PREOPERATING PROCEDURES	
Lubrication, scheduled	4B.3.3	Applying power	3.2.1
Removing assembly	4E.5.3	Monitoring, facilities	3.2.5
Removing Fan and Flywheel	4E.5.2	Selecting Hub Size	3.2.3
Replacing Motor Capacitor	4E.5.4	Selecting Tape Speed	3.2.2
MOTOR, REWIND		Threading Tape (3-3)	3.2.4
Checking	4E.11.9	PRINTED CIRCUIT BOARDS (1-4, 2-5)	
Tension adjustment (4C-1)	4C.2.3	Bias Amplifier	1.3
MOTOR, TAKEUP		Power Supply	1.2
Checking	4E.11.8	Record	1.3
Tension Adjustment (4C-1)	4C.2.3	Reproduce	1.3
OPERATING CONTROLS AND INDICATORS		Replacement of Parts	4F.9.2
Electronics, Record/Reproduce (3-2)	3.1.2	PULLEY, REEL IDLER (6-15)	
Electronics, Reproduce-only	3.1.3	Removal of	4E.6.2
Tape Transport (3-1)	3.1.1	RECORD CIRCUIT (6-24)	
OPERATION		Checking	4F.7.2
Controls and Indicators (3-1, 2)	3.1	Principles of Operation	5.2.3
Edit modes	3.6	RECORDING, OPERATION	
Fast-winding modes	3.5	With Sel-Sync	3.3.2
Record mode	3.3	Without Sel-Sync	3.3.1
Reproduce mode	3.4	RECORD AND REPRODUCE	
Pre-operating procedures (3-3)	3.2	Alignment	4C.3
OSCILLATOR, MASTER BIAS (6-22)		Checking	4F.7
Checking	4F.6	Conversion	4A.6
Principles of Operation	5.2.2	REEL DRIVE PLATE	
PERFORMANCE, OVERALL, CHECK		Replacement of	4E.4.3
Distortion	4B.4.6	REEL IDLER (6-15)	
Flutter	4B.4.7	Corrective Maintenance	
Frequency Response	4B.4.4	Arm Tension, adjustment	4E.6.3
Signal-to-Noise (4B-1, 2)	4B.4.5	Arm Assembly, removal of	4E.6.4
POWER (LINE)		Ball Bearing, replacement of	4E.6.6
Application of (control)	3.2.1	Complete assembly, removal of	4E.6.5
Checking	4E.11.4	Pulley assembly, removal of	4E.6.2
Connection of	2.6	Tape Guide, removal of	4E.6.1
Consumption	1.7	Principles of Operation	5.1.4
Requirements	1.7		

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS

REEL SWITCH	Para.	SIGNAL-TO-NOISE RATIO, OVERALL	Para.
Use of (hub size)	3.2.3	Checking (4B-1, 2)	4B.4.5
		Specifications for	1.7
REMOTE CONTROL (Optional)		SOLENOIDS	
Catalog No.	1.6.2	Capstan	
Description	1.6.2	Checking	4E.11.6.3
Installation	2.7.2	Removal of	4E.8.5
RELAY, ELECTRONICS, RECORD		Edit Brakes	
Checking	4F.4	Checking	4E.11.6.5
Servicing Hints	4E.2.3	Removal of	4E.4.7
RELAYS, TAPE TRANSPORT		Main Brakes	
Checking	4E.11.5	Checking	4E.11.6.4
Servicing Hints	4E.2.3	Removal of	4E.4.7
REPRODUCING, OPERATION	3.4	Tape Lifter	
		Removal of	4E.9.2
REPRODUCE CIRCUIT		SPECIFICATIONS, OVERALL	1.7
Checking	4F.7.3	SPRING, TAKEUP TENSION ARM	
Principles of Operation	5.2.4	Replacement of	4E.7.4
RESPONSE, FREQUENCY		STRAPPING, OUTPUT (5-4, 6-28)	2.5.4
Checking	4B.4.4	SWITCHES, CONTROL BOX	
Specifications for	1.7	Replacement of	4E.11.11
REWIND ASSEMBLY (6-13)		SWITCH, SAFETY	
Corrective Maintenance		Adjustment of	4E.7.2
Assembly, removal of	4E.4.2	Removal of	4E.10
Brake assembly, removal of	4E.4.5		
Brake assembly, remounting	4E.4.8	TAKEUP ASSEMBLY (6-12)	
Brake band, replacement of	4E.4.6	Corrective Maintenance	
Brake solenoids, removal of	4E.4.7	Assembly, removal of	4E.4.2
Motor capacitor, removal of	4E.4.9	Brake assembly, removal of	4E.4.5
Reel Drive Plate, removal of	4E.4.3	Brake assembly, remounting	4E.4.8
Turntable Pad, replacement of	4E.4.4	Brake Band, replacement of	4E.4.6
Principles of Operation	5.1.2	Brake Solenoids, removal of	4E.4.7
SCRAPE FLUTTER IDLER (6-7)		Motor Capacitor, removal of	4E.4.9
Optional Catalog No.	1.6.5	Reel Drive Plate, removal of	4E.4.3
Optional, Installation (4A-3,4)	4A.3	Turntable Pad, replacement of	4E.4.4
Lubrication of	4B.3.4	Principles of Operation	5.1.2
SEL-SYNC (6-24)		TAKEUP TENSION ARM	
Adjustment of		Corrective Maintenance	
Bias Trap	4C.4.4	Assembly, removal of	4E.7.5
Level	4C.4.3	Arm Force, adjustment of	4E.7.1
Description	1.1	Safety Switch, adjustment of	4E.7.2
Recording with	3.3.2	Tape Guide, removal of	4E.7.3
Principles of Operation	5.2.5	Tape Hook, removal of	4E.7.3
SIGNAL LINES		Tension Spring, replacement of	4E.7.4
Connection of	2.5	Principles of Operation	5.1.5

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS

<b>TAPE</b>	<b>Para.</b>	<b>TRANSPORT, TAPE (Cont.)</b>	
Threading (3-3)	3.2.4	Normal Adjustments	4C.2
Tension, adjustment of (4C-1)	4C.2.3	Routine Maintenance	
Speeds	1.7	Flutter Check	4B.4.7
Width Conversion	4A.2	Lubrication	4B.3
Wrap	4D.3	Theory of Operation (5-1,2)	5.1
<b>TAPE LIFTER (6-11)</b>		<b>TURNTABLE PAD</b>	
Adjustment of (6-10)	4E.9.1	Replacement of	4E.4.4
Assembly, removal of	4E.9.3		
Solenoid, removal of	4E.9.2	<b>TURNTABLES, Repositioning</b>	4A.1
Principles of Operation	5.1.6		
<b>TAPE SPEED</b>		<b>ZENITH, heads</b>	4D.3
Available	1.7		
Selection of	3.2.2		
<b>TENSION, REEL IDLER ARM</b>			
Adjustment of	4E.6.3		
<b>TENSION TAPE</b>			
Adjustment of (4C-1)	4C.2.3		
<b>TEST CONDITIONS</b>			
Alignment, electronic	4C.3.3		
Overall Performance Checks	4B.4.3		
Sel-Sync Adjustment	4C.4.2		
<b>TEST EQUIPMENT</b>			
Adjustments, Sel-Sync	4C.4.1		
Adjustments, Transport	4C.2.1		
Alignment, electronics	4C.3.2		
Overall Performance Checks	4B.4.2		
<b>TEST TAPES</b>			
Flutter	4B.4.7		
Catalog Nos.	4B.4.2		
Alignment	4C.3.1		
Catalog Nos. (Table)	4C-8		
<b>TRANSFORMERS, INPUT (Optional)</b>			
Catalog Nos.	1.6.1		
Description	1.6.1		
Installation	2.7.1		
<b>TRANSPORT, TAPE (6-8, 6-9)</b>			
Controls and Indicators (3-1)	3.1.1		
Conversion			
Repositioning Turntables	4A.1		
Scrape Flutter Idler	4A.3		
Tape Width	4A.2.2		
Corrective Maintenance	4E		
Description, General (1-2)	1.2		

NUMBERS IN PARENTHESIS ARE APPLICABLE ILLUSTRATIONS