

# MX-10/MX-35

## MIXER ASSEMBLY





TM-2010A

89-0138

JANUARY, 1962

AMPEX CORPORATION, AUDIO DIVISION

Issue A

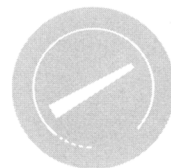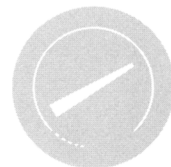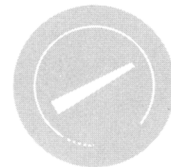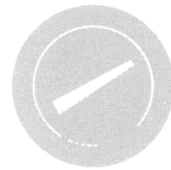

**'LIST OF EFFECTIVE PAGES'**

<b>PAGE NUMBER</b>	<b>ISSUE IN EFFECT</b>	<b>PAGE NUMBER</b>	<b>ISSUE IN EFFECT</b>	<b>PAGE NUMBER</b>	<b>ISSUE IN EFFECT</b>	<b>PAGE NUMBER</b>	<b>ISSUE IN EFFECT</b>
Title	A	1/62					
A	B	5/62					
i	A	1/62					
ii	A	1/62					
1-1	A	1/62					
1-2	A	1/62					
2-1	A	1/62					
2-2	A	1/62					
2-3	A	1/62					
3-1	A	1/62					
3-2	A	1/62					
3-3	A	1/62					
4-1	A	1/62					
4-2	A	1/62					
5-1	A	1/62					
5-2	A	1/62					
6-1	A	1/62					
6-2	A	1/62					
6-3	A	1/62					
6-4	A	5/62					
6-5	A	5/62					
6-6	Blank						
6-7	A	5/62					
6-8	A	5/62					
6-9	A	5/62					
6-10	A	5/62					
7-1	A	1/62					
7-2	A	1/62					
7-3	A	1/62					
(8-1)	A	1/62					
9-1	A	1/62					
9-2	A	1/62					

89-0138B 5/62

# TABLE OF CONTENTS

1	INTRODUCTION	
	Use of the Instruction Manual.....	1-1
	The General Description Section.....	1-1
	The Installation Section.....	1-1
	The Operation Section.....	1-1
	The Checkout and Adjustment Section.....	1-1
	The Maintenance and Troubleshooting Section.....	1-2
	The Theory of Operation Section.....	1-2
	The Notes and Bulletins Section.....	1-2
	The Index .....	1-2
2	DESCRIPTION	
	General.....	2-1
	Performance Characteristics .....	2-1
	Equipment Applications .....	2-2
3	INSTALLATION	
	General.....	3-1
	Installation of Equipment.....	3-1
	Installation of Plug-In Items.....	3-1
	Connections .....	3-3
4	OPERATING INSTRUCTIONS	
	Controls .....	4-1
	Applying Power .....	4-2
	Setting Up the Controls.....	4-2
	Operation of the Equipment.....	4-2
5	CHECKOUT AND ADJUSTMENT	
	General.....	5-1
	Overall Gain Measurement.....	5-1
	Overall Gain Adjustment.....	5-2
	Frequency Response Measurement.....	5-2
6	MAINTENANCE AND TROUBLESHOOTING	
	General Maintenance Information.....	6-1
	Corrective Maintenance .....	6-1
	Ordering Parts.....	6-1
	Parts List, Mixer Assembly.....	6-3
7	THEORY OF OPERATION	
	Microphone Preamplifiers .....	7-1
	Output Amplifiers .....	7-1
	Mixer Coupling .....	7-2
	Power Supply .....	7-2
8	NOTES AND BULLETINS	8-1
	INDEX	9-1

## LIST OF ILLUSTRATIONS

2	Typical Uses of the MX-10 Mixer.....	2-3
3	MX-10 Mixer Assembly — $\frac{3}{4}$ View.....	3-1
	Rack Layout (Shown with PR-10 Tape Recorder).....	3-1
	Mounting Dimensions .....	3-2
	Interconnecting Two or More Mixers.....	3-2
4	Operating Controls .....	4-1
5	Response and Gain Measurement Set-Up.....	5-1
6	Troubleshooting the Mixer.....	6-1
	Parts Location, MX-10 Mixer.....	6-9
7	Block Diagram, MX-10 Mixer.....	7-1
	Partial Schematic Diagram, Microphone Preamplifier.....	7-2
	Partial Schematic Diagram, Output Amplifier.....	7-2
	Schematic Diagram, MX-10 Mixer.....	7-3

**Section 1 INTRODUCTION**



Section 1

## INTRODUCTION

0109

### USE OF THE INSTRUCTION MANUAL

This instruction manual is intended to give the installation man, the operator, and the maintenance man the most complete and accurate information that is available.

For the installation man:

*the description section,  
the installation section,  
the operation section, and  
the checkout and adjustment section*

are required reading.

For the operator:

*the description section,  
the installation section, and  
the operation section*

are required reading.

For the maintenance man:

*the description section,  
the checkout and adjustment section,  
the maintenance and troubleshooting  
section, and  
the theory of operation section*

are required reading. The installation and operation sections may also offer valuable information to the maintenance man.

### THE GENERAL DESCRIPTION SECTION

The description section briefly describes the mixer assembly and its performance characteristics. This section also describes the ways in which the equipment can be used.

### THE INSTALLATION SECTION

The installation section provides all necessary information for properly installing and connecting the equipment. All mounting dimensions are given for custom installation. Testing of the equipment after installation is *not* covered in this section, but rather is covered in the checkout and adjustment section which follows the operation section.

### THE OPERATION SECTION

The operation section describes the operating controls and their functions, and describes how to set up and use the equipment.

### THE CHECKOUT AND ADJUSTMENT SECTION

The checkout and adjustment section provides all the necessary information for checking out and adjusting the equipment. The checkout procedures are given first to ascertain whether or not the system is operating properly. This is followed by the adjustment procedures. Any malfunctions found while performing either of the above procedures, should

be corrected using maintenance procedures that will be found in the maintenance and troubleshooting section of the manual.

### **THE MAINTENANCE AND TROUBLE SHOOTING SECTION**

The maintenance and troubleshooting section provides insuring information on maintaining functional equipment for long lasting operation. An illustrative parts location diagram and a complete parts list aids the user in locating all basic components.

### **THE THEORY OF OPERATION SECTION**

The theory of operation section provides technical information on how the mixer works.

### **THE NOTES AND BULLETINS SECTION**

The notes and bulletins section is a section

set aside for the user to write down any specialized operating techniques or maintenance procedures. It can also be used for setting up a regular maintenance schedule. In short, this section may be used in any manner desired.

As an aid to the user, Ampex publishes service bulletins and operation bulletins from time to time. This section can (and should) also be used to keep these bulletins together in a central location.

### **THE INDEX**

In an attempt to give as complete a manual as possible, the index is included to aid in locating the required information as quickly as possible.